



RIVERFLOW PUMP INSTALLATION GUIDE

RIVERFLOW SYSTEM WARRANTY ACTIVATION REQUIREMENTS

Follow these steps to begin the process of activating the warranty for your Riverflow™ Pump.

Step 1: Current Systems Inc. must have digital photos clearly showing the Riverflow pump installation with:

- Entire pump and motor installed
- A close up view of the shaft coupling
- Motor wiring inside motor junction box
- Line and load wiring of mounted VFD
- Dedicated non-GFI circuit breaker
- Non-fused disconnect (if required)

Visit www.riverflowpumps.com to submit your photos and fill out the warranty validation form.

Step 2: Licensed electrician must call Current Systems Inc. PST (805) 339-9292 or EST (888) 443-4113 prior to applying power to the Riverflow pump motor for start up. A factory authorized technician will instruct the electrician in programming the VFD.